


VW Thing

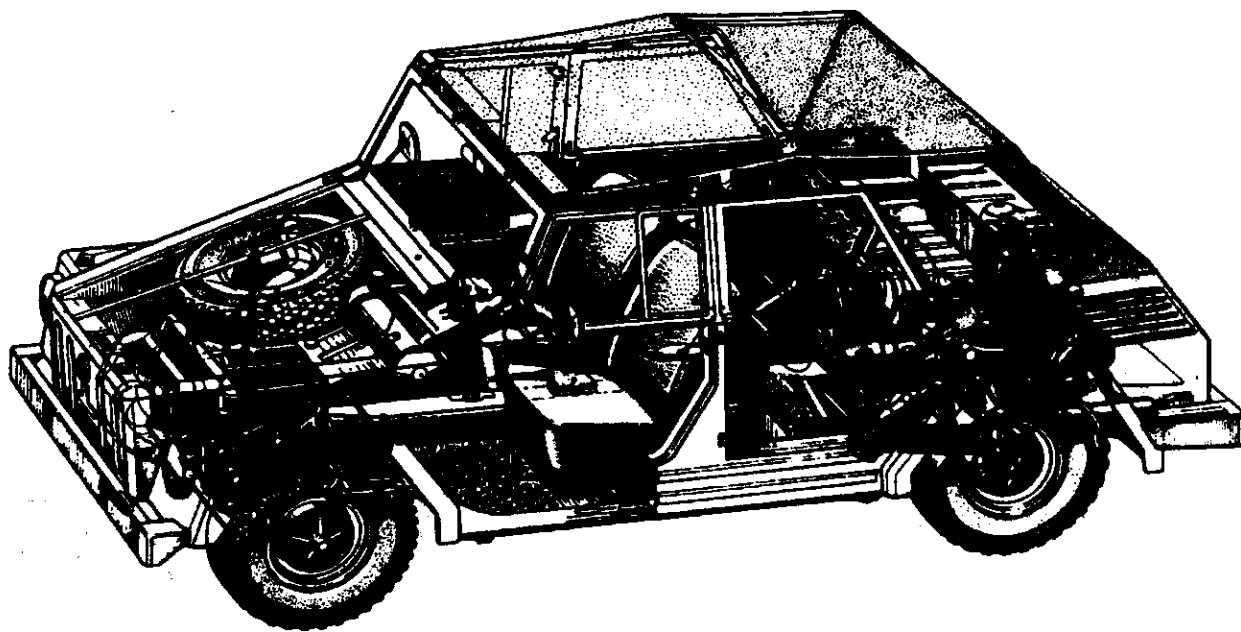

Type 181

Service Manual

Contents

Section A

Body

- 1.3 Description of Body
- 2.3 Bumpers
- 3.2 Fenders
- 4.4 Hood, Latches, Deck lid
- 5.3 Doors
- 6.1 Windows
- 7.3 Seats
- 8.3 Heating
- 10.3 Interior Trim
- 11.3 Exterior Trim
- 13.3 Top
- 18.5 Body Dimensions

Section B

Brakes

- 1.1 Description of Brake System
- 1.8 Technical Data
- 1.9 Maintenance
- 2.1 Brake Fluid Reservoir
- 2.2 Master Cylinder
- 2.3 Master Cylinder Rebuild
- 2.5 Brake Lighting Switch
- 2.6 Master Cylinder Push Rod
- 2.7 Pedal Assembly
- 3.1 Front Brakes
- 4.1 Rear Brakes
- 4.2 Brake Hoses
- 4.3 Parking Brake
- 8.1 Bleeding Brakes
- 8.2 Brake Fluid

Section E

Electrical

- 1.2 Wiring Diagram
- 1.3 Technical Data
- 2.1 Generator Voltage Regulator
- 2.2 Generator Voltage Regulator Application List
- 2.3 Testing Generator Voltage Regulator
- 2.9 Location of Regulator
- 3.2 Starter Application List
- 3.3 Testing Starter
- 3.4 Starter test Data
- 3.5 Trouble Shooting Starter
- 3.6 Starter Removal
- 3.7 Starter Rebuild
- 5.3 Testing wiper Motor
- 5.4 Trouble Shooting Wiper Motor
- 6.4 OK Pressure Switch
- 9.1 Battery

Section F

Gas Heater

- 3.1 Description of Heater
- 3.5 Trouble Shooting Heater
- 3.3 Testing and Adjusting
- 3.4 Air Ducts
- 3.5 Assembly and Disassembly
- 3.6 Fuel pump
- 3.7 Combustion Blower

Section H

Transmission Rear Suspension

- 1.3 Technical Data
- 2.8 Transmission Removal
- 3.1 Case and Gears
- 5.1 Differential
- 7.2 Rear Suspension
- 8.1 Shifter and Components

Section K

Fuel and E.G.R. System

- 1.1 Carburetor, E.G.R. Description
- 1.4 Altitude Corrector
- 1.5 Throttle Valve Positioner Rebuild
- 1.6 Fuel Pump
- 2.1 Carburetor Adjustment
- 3.1 Carburetor, Fuel Pump

Section K/S

Technical Information

- 1.2 Lubricants Technical Info
- 1.3 Fuel Technical Info

Section M

Engine, Ignition System

- 1.1 Engine Description
- 1.3 Technical Data
- 1.6 Testing Engine
- 2.1 Removing, Installing Engine
- 2.2 Disassembling, Assembling Sequence
- 3.1 Ignition System Description
- 3.2 Distributor Repair
- 4.1 Cooling System Parts
- 4.2 Heater Boxes
- 4.3 Cooling System Adjustment
- 5.1 Lubrication System
- 6.1 Cylinder Head Rebuilding
- 6.2 Piston and Cylinders
- 7.1 Disassembling, Assembling Crankcase
- 7.3 Crank and Rods
- 8.1 Clutch
- 8.3 Throwout Bearing Adjuster
- 9.1 Special Instructions

Section V

Front Suspension and Steering

- 1.1 Front Suspension Description
- 1.2 Steering Description
- 1.4 Technical Data
- 4.1 Disassembling, Assembling Front Suspension
- 6.1 Tie Rods, Steering Damper
- 7.1 Steering Column
- 8.1 Steering Box